

Did you know.....

- A network connection is only necessary when loading CDs? If you don't have a broadband connection, Wireless Bridge and Dial-Up Adapter kits are available for use with your Music Center. See your manual for details.
- Instead of using the onscreen touch keypads, you can plug any USB keyboard into the port next to the blue power button. Use it to easily and comfortably enter information.
- You can burn a CD of your favorite playlist? Simply select a playlist, touch the down-arrow symbol next to "Playlists".
- You can "sample" a track by double-tapping on the track title?
- The Music Center can automatically generate a playlist based on theme, tone, style, even mood. From the VIEW MODE MENU, simply select "Tapestry" and a range of themes and styles, based on your music library, appears. Allow Tapestry to guide you through the settings, then let your Music Center compile a unique and pleasantly surprising playlist!

This sheet is intended to get you started for enjoying your Rock-Ola Music Center. Please refer to your Music Center manual for complete instructions, as well as service and parts information.

Visit the Rock-Ola website for product news and updates.



2335 208th Street • Torrance, CA 90501 • Phone (310) 328-1306 • Fax (310) 328-3736

www.rock-ola.com

Rock-Ola and "Auto Magic Touch Screen" are registered trademarks of the Rock-Ola Manufacturing Co. Visit Liberty Games | www.libertygames.co.uk | 0800 612 8180 | +44 1372 736 470
Qsonix™ is a registered trademark of Qsonix, Inc.
All specifics are subject to change without notice.

ROCK-OLA® MUSIC CENTER QUICK START GUIDE

Version 2.4 and up

STEP 1

You will need:

1. A broadband Internet Connection*
2. Power
3. CDs to load onto the hard drive
4. Optional: additional speakers

Get Connected

1. Connect your Ethernet cable to your modem or router.
2. Connect the other end of the Ethernet cable to the network port on your Music Center (see diagram for location on your model).
3. Connect power cord to power source.
4. Turn the **main system power switch** to the ON position.
5. When the amplifier/cabinet power supply powers up, press the **blue power button**.
6. Wait a few minutes while the core and lights power up and the operating system and application software load. When this is done, the main screen appears.
7. Follow the "First Time Start-up Wizard" on the Welcome screen.
8. Complete the series of 5 set-up screens. The system will do the rest.
9. When you reach the "Connectivity-Success" screen, you've made it. Tap the "Done" button on the screen. You are now ready to listen to and load some music!

Loading CDs

1. Gather at least 4 or 5 CDs to load.
2. Confirm that your internet connection is available.
3. Open the disk drive and insert a CD in the tray. Close the drive and wait until the disk information is displayed on the screen.
4. Confirm that the CD information shown matches the CD in the tray. If it's a match, select "Begin Loading." The system will take care of the rest.
5. If CD information is not found, follow onscreen instructions for using the CD Loading Wizard. (See User's Manual for details.)

STEP 2

Start Enjoying Your Music Center Now

Play Music

1. Select an album.
2. Select a track.
3. Drag the highlighted track and drop into the NOW PLAYING area of the screen.
4. You can drag the whole album into the NOW PLAYING area, or
5. Touch the drop-down menu arrow and select PLAY NOW.

Build a Playlist

1. Select the tracks or albums and drag them into the NOW PLAYING area of the screen.
2. Tap the drop-down menu arrow next to NOW PLAYING and select the "Save All to New Playlist" option.
3. Follow the onscreen prompts to save your playlist for future enjoyment.

Burn a Custom CD

1. From the NOW PLAYING list, tap the drop-down menu arrow and select "Burn to CD".
2. From the PLAYLISTS group, select a playlist, tap the drop-down menu arrow and select "Burn to CD".
3. From the ALBUM VIEW, select an album, tap the drop-down menu arrow and select "Burn to CD".

MP3 Player on the Music Center

1. Connect your iPod® or other MP3 player to the red and white audio input ports.
2. Listen to your MP3 tracks on your Music Center system. (Note: For direct MP3 play, the Music Center must not have tracks playing in the NOW PLAYING queue.)

USB Port

The USB Port allows connection of:

1. USB flash - or hard drive connection for direct music import.
2. USB keyboard for data input.

* Cable or DSL only, not Satellite.

P/N 61651-02

AUTOMAGIC TOUCH SCREEN® GUIDE AT-A-GLANCE

Network Settings - configures your system for internet connection. Also allows for advanced settings to enable file and media sharing.

Date/Time - Sets up date and time.

Audio Quality - Specifies Audio Encoding quality and storage capacity. Three choices are available:
High allows room for about 1,000 CDs
Medium stores about 2,000 CDs
Low has capacity for about 3,000 CDs
The levels can be changed at any time from this menu option.

Playback Preferences - Lets you fine-tune the cross-fade and volume levels for regular and "preview" play. Advanced menu also allows you to limit local volume control. (Includes new "Volume Leveling" feature)

Information - This screen displays current settings and statistics about your Nostalgic Music Center such as software version, available hard drive space, system ID and IP address.

Access Protection - Allows you to set a password to control access to system settings and playlists.

System Management - System Maintenance, Media Import, Backup/Restore, Screen Saver Settings, Screen Calibration, Access Protection, Date and time, System Shutdown.

Protected Access Padlock

The **open lock** lets you know that the "Protected Access" is set, but has been temporarily disabled to allow changes to be made to settings or playlists.

To return to "Protected Access"

Tap the **open lock** once and the system will return to the "protected access" state. Music will play as programmed, but the screen changes to a non-functional screen saver that simply displays the current and next tracks.

Whirling CD

This symbol indicates that a CD is in the process of being loaded onto the hard drive. It only appears on the menu bar during the CD loading process.

The **"Tool Kit"** icon is the access point to the "Information and Preferences" menus which allow you to view and control all the system settings.

Album
Artist
Genre
Cover
Year
Search
All
Tapestry
Recent
Imported

View Mode Menu

Menu Bar

Access to drop-down windows that control album and song information. Also shows status of album loading, security, and gives access to toolkit.

Album Browser Display

Shows album details and allows "fast preview" of tracks.

Album Browser Controls

Allows search via page arrows and artist/album alpha search. Also shows total number of albums and number of currently displayed albums.

Page Buttons

Total Albums loaded

The screenshot shows the main interface of the AUTOMAGIC TOUCH SCREEN. At the top, there's a menu bar with icons for 'All', 'Protected Access', 'Whirling CD', 'Rock Old', and 'Tool Kit'. Below this, the 'Album Browser Display' shows 'The Beatles - Abbey Road' with a 'Review' button and a list of tracks. Below that, 'Billy Joel - River of Dreams' is shown with a 'Details' button and a list of tracks. To the right, a 'PLAYLISTS' panel shows a list of playlists including 'Andrea's chill set', 'Broadway!', 'Guilty Pop pleasures', 'Psychedelic Grooves', and 'Tango Inferno'. Below the playlists, a 'Now Playing' panel shows the current track 'G'won Train' by Quincy Jones. At the bottom, there are 'Page Buttons' for navigation and a 'Total Albums loaded' indicator showing '15/16 of 58'.

View all playlists, or only those for iPod sync or non-sync.

Share your Playlists on CD!
Make a compilation, save it as a playlist, then burn it to a CD to play in the car or share with friends.

Playlist Panel

Total management of playlists via **drop-down menu**.

iPod® Synchronization!

Sync your playlists to the iPod and take your music anywhere. The iPod symbol indicates these playlists are ready to sync.

Automate your Playlist Compilation!

Let your Music Center automatically build playlists from your collection based on Themes, Tones, Styles, even duration. Simply select Generate Playlist and choose your preferences. The rest is automatic!

Now Playing Panel

Shows current playlist tracks, allows management of tracks, and supports playlist creation using the **drop-down menu**.

Transport Controls

provide control over song playback functions.

Equalizer Settings

invokes the audio equalizer pop-up controls for optimal play. Pre-set for 5 types of music and fully adjustable.

Volume-controls... volume!, also mute control

2-Zone Music Pleasure!

Configure your Music Center with 2 sets of speakers in separate areas and adjust volume separately for each area, Zone 1 or Zone 2.

* Use only CD-R or DVD-R disks.

Alpha Search

Track Position

A visual reference to the current playing song length.

To sample a track, simply double-tap on the track title. A 7-second sample of the tune will fade in over the track that is currently playing.

